 



# Wi-Fi User Manual



# Know your Jazz Wi-Fi Device

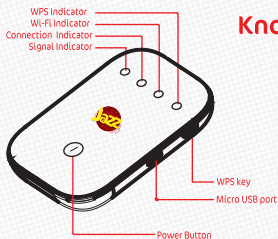

 
## Know your device

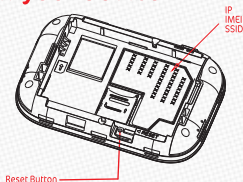

# 1 | Before You Begin


Remember or write down the SSID (Service Set Identifier) and Password mentioned in the battery compartment before inserting the battery and replacing back cover.

 You will need it to set up your device.

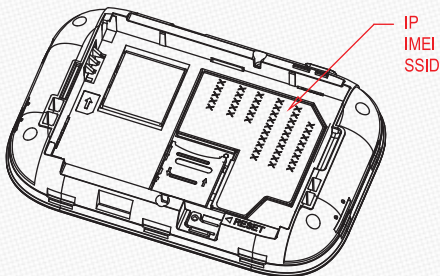

## 2 | Inserting SIM Card & SD Card

 Open the back cover and locate the SIM and SD Card slots. Slide the SIM and SD trays downwards (OPEN) to lift the trays up. Then insert the SIM and SD Cards and slide the trays upwards (LOCK) to secure the tray. Make sure both the SIM and SD Cards are placed properly with the chip facing down.

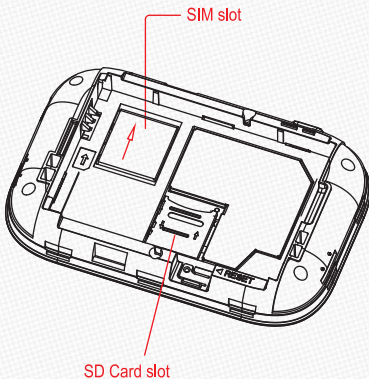

### 3 | Turning on the Device

The setup is complete. Now you can turn ON your device pressing the Power Button and connect your device to the wireless network by using the SSID and Password you noted down in Step 1.

 
Hold the power button for 3 Seconds to turn the device ON/OFF. You can connect up to 12 Wi-Fi enabled devices at the same time on your Jazz Wi-Fi Device.



## 4 | The Wi-Fi Push Setup

The Wi-Fi Push Setup (WPS) Key enables you to connect to the device without entering the password.


Simply press the WPS Key for 3 seconds and then press the WPS button on your mobile phone, tablet or computer.



## 5 | Charging the device

When charging the battery for the first time, it is recommended to charge the device to 100% using the adapter and power cable provided.

 Turn OFF the device when charging for better results.

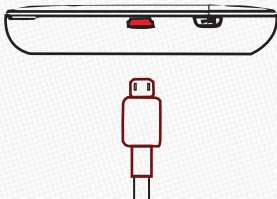

## **Charging Time**

USB Cable: Approx 77hrs

Power adapter: Approx 3hrs 30 mins

## **Battery Time on 4G\***

Stand by time: Approx 300hrs

 
Running time: Approx 6-7hrs

\*Depends on network conditions

## 6 | Resetting the device

Occasionally, you may need to perform a Hardware or Factory reset when you forget your login username or password.

To reset the device, insert a small pin (such as a straightened paper-clip) into the Reset Button for 1 second.

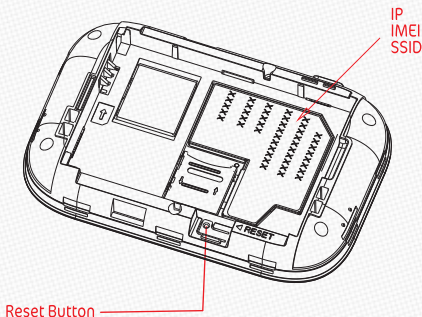



## 7 | Web Configuration

### Change Network Name, Password etc.

Using the Web configuration utility, you can change the Network Name (SSID), the Password, configure the Sleep Mode and modify other functions.

Step 1:

Connect your Computer/Smartphone to the Jazz Wi-Fi device over USB or Wi-Fi interface.

Step 2:

Enter the URL <http://jazz.wifi> in address bar of the browser to open the web configuration page

Remark: The system might enter sleep mode after some time of inactivity. In case the device goes into sleep mode press the power button lightly to bring it back to active mode. During sleep mode, the SSID of your Jazz Wi-Fi Device will stop broadcasting and a breathing light can be seen on the power button.

## 8 | Indicators

Signal Indicators:


 No Network


 2G

 3G

 4G

Battery Indicators:

 20% - 100%

 Less than 20%

# Frequently Asked Questions

If you can't connect to the internet, take a look at the questions below

## Q. Why can't I access the internet?

- Please check if the user is connected to Jazz Wi-Fi SSID.
- Make sure your SIM card is properly inserted.
- Check if your Jazz Wi-Fi is connected to the network.
- Ensure your sim card is activated and has adequate data balance available.

## Q. How do I change my network name and Password?

- Please connect computer/smartphone to your Jazz Wi-Fi device over USB/Wi-Fi interface.
- Enter <http://jazz.wifi> in the browser's URL input field.
- Click on the "Login" button on top right corner of your webpage screen.
- Use the following login details to access the Web Configuration Utility and make changes to your network:

Username: administrator

Password: administrator

## **Q. Why can't I establish a Wi-Fi connection?**

Please make sure the Wi-Fi function is active on your Jazz Wi-Fi. Refresh the network list and select the correct SSID. Type the correct network key (Wi-Fi password) when you connect to the device.

## **Safety for the Owner:**

Always keep the device at a distance of 20cm from medical devices like hearing aids, pacemakers as they may interfere with your Wi-Fi device. It is advisable to consult your physician or the manufacturer of the medical device before using your device.

Avoid using device in areas with high electromagnetic radiations.

Be aware of the usage limitations when using your device at places such as aircrafts, petrol stations, hospitals, oil warehouses or chemical factories, where there are explosives gases or explosive products being processed. Turn off your device if required.

Do not open and touch the inner area of your device as it may affect your device performance.

Keep the device out of children's reach. Your device may cause injury if used as a toy.

Do not touch metallic parts of your device as they may become hot when the device is working.

## **Device Handling:**

- Use only original and authorized accessories. Unauthorized accessories may affect your device performance.
- Do not expose your device to moisture or water. Handle carefully. Do not drop!
- Kindly use your device with a Nano SIM card only. Do not try to insert SIM card of any other size as this may lead to damaging the SIM slot connector pins and might render your device useless.
- Please avoid all night charging of the device.

## **Battery Usage precautions**

- Do not short circuit or try to disassemble the battery as it may start a fire.
- Always store battery in a cool dry place.
- Always use genuine and authorized charger to charge the battery.
- Replace worn out battery with authorized and genuine battery.

- Dispose worn out battery in an appropriate way. Battery to be used for intended purpose only.

## Information

### Technical specifications

General Supported OS	WinXP(SP3 onwards)/Vista/ Win7/Win8 Win10/MAC/Linux
Input voltage Output Voltage Maximum power consumption	5V 4.35V Maximum 3.5W
External interfaces	Micro-USB port Micro-SIM Card interface Micro-SD card interface(up to 32GB)
Operating Temp.charge	Charging: 0℃~+40℃ Discharge: 0℃~+60℃
Dimensions(L*W*H)	85.0*56.0*15.3mm
No.of device supported	12 (WiFi)+1(USB tethering)
Battery Rated Capacity Maximum charge voltage	2300mAh 4.35V
Power adaptor Input power supply AC Output power supply	100~240V DC 5V

Environmental Ambient Temperature Humidity	Operating: 0°C ~ +40°C Storage: -20°C ~ +60°C 5% to 95% (non-condensing)
--	--

**Jazz Wi-Fi**

## Reach us

If you have further questions or require personal assistance, please contact us by calling or sending an email.



Phone: 111-300-300.



Visit [www.jazz.com.pk](http://www.jazz.com.pk)